


**RWQCB REGION****REGION 2 – SAN FRANCISCO BAY****CALTRANS DISTRICTS**

4

**COUNTIES**

District 4: Western Alameda, western Contra Costa, Marin, western Napa, San Francisco, San Mateo, northern Santa Clara, western Solano, and southern Sonoma.

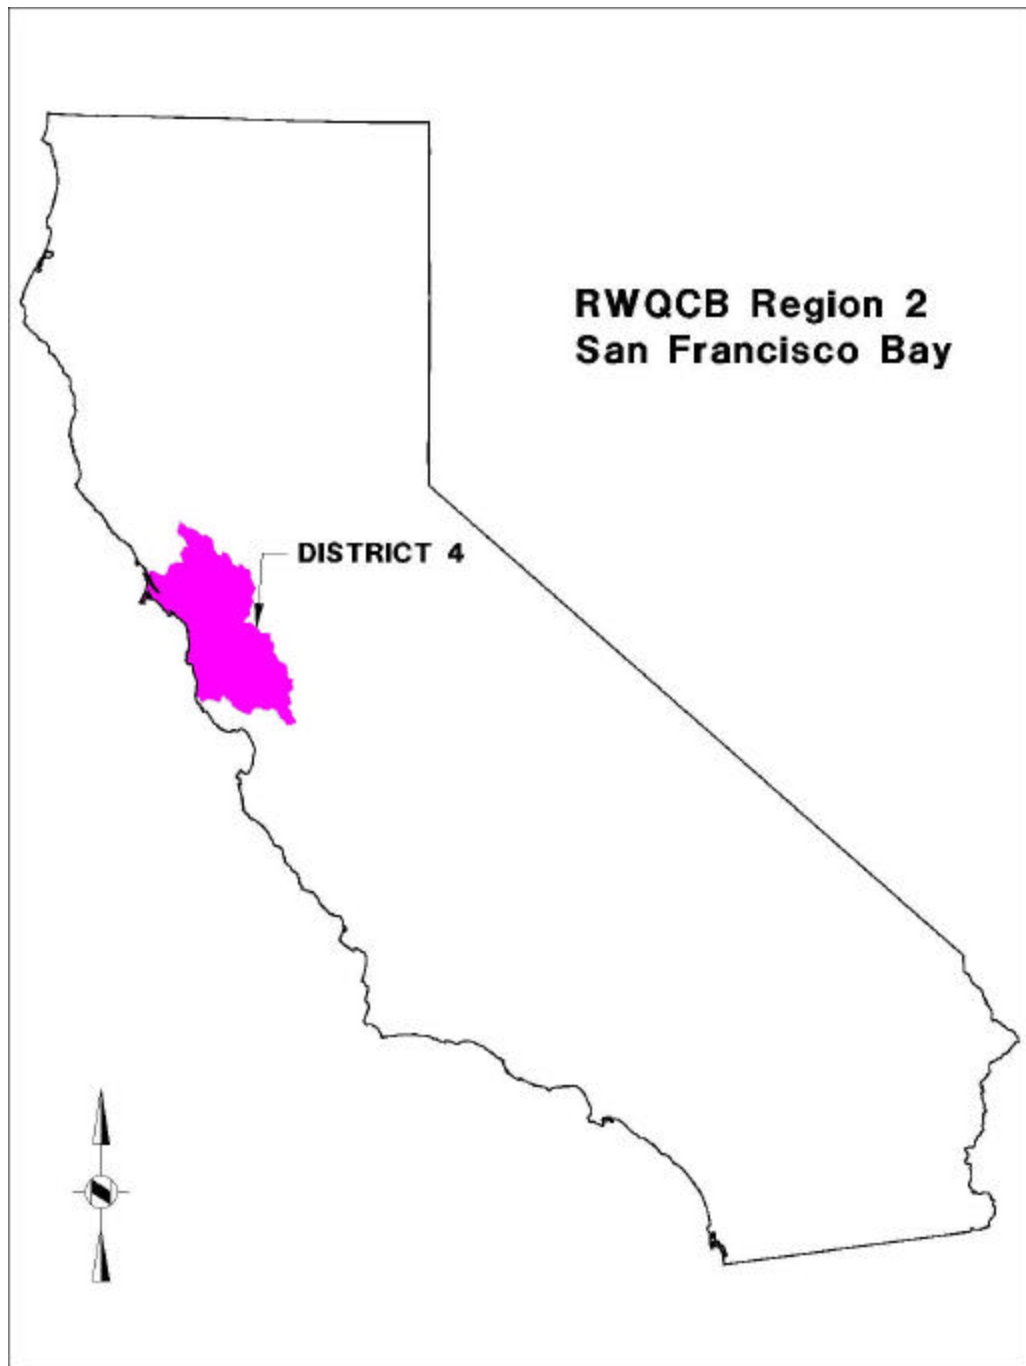

**RWQCB CONTACTS**

**General:** 1515 Clay Street, Suite 1400  
Oakland, CA 94612  
(510) 622-2407

**Primary:** Hossain Kazemi  
(510) 622-2369  
MHK@rb2.swrcb.ca.gov

**Secondary:** Dale Bowyer  
(510) 622-2323  
Dcb@rb2.swrcb.ca.gov

**NPDES Permitting Requirements for Dewatering Discharges:**

All dewatering discharges from storm water (accumulated precipitation) and non-storm water (groundwater, cofferdams, diversions, etc.) must be authorized by the RWQCB. On a site-specific basis the RWQCB may allow short-term small quantity discharges without a permit but with verbal permission.

**General NPDES Dewatering Permit(s):**

None. Site-specific NPDES dewatering permits only.

**Site-Specific NPDES Dewatering Permit(s):**

**How to Apply:** Applicant must have been denied permission to discharge to the local sanitary sewer.

RWQCB application instructions are provided in "Application for Temporary Discharge of Groundwater." Requires completed Application for Facility Permit/Waste Discharge Form, description/history/analysis of groundwater, and fee of \$1000.

**General**

**Requirements:** Monitoring and reporting required as defined in the RWQCB Discharge Authorization Letter. Receiving water requirements are defined in the Basin Plan.